



ABS Plastic Assembly Locker

DIY Assembly

boltless design; no tool required

First, get ready the parts of locker needed.



Base Board with
adj. nut x 1 piece



Side Board x 2 pieces



Back Board x 1 piece




Top Board x 1 piece

01




Step 1: Insert the back panel tabs into the pockets along the rear edge of the side panel.

02

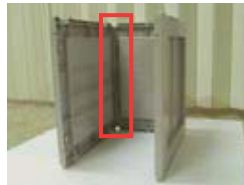

Step 2: Press another side panel onto the tabs on the other side of the back panel.

03

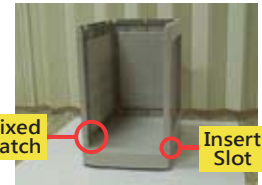


Step 3: Join and press down the sides-back-and-top-panel assembled into the base panel.

04



Step 4: Push 4 latches inwards to lock.

05

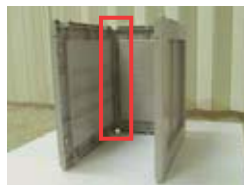


Step 5: Press down top panel onto the top of the assembly.

06



Step 6: Push 4 latches inwards to lock.

07

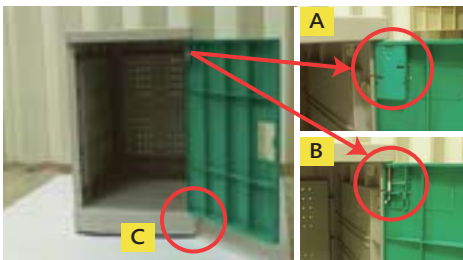

Step 7: Inset Locker Door into mounting at Base Board, C. Then press down door hinge cap, A and push down Metal hook spring and insert into mounting at Top Board.



Locker installation is completed. Repeat step 1 to step 7 for upper compartment if required.